

Knowing how to operate your Thermomix™ safely is just as important as knowing the favourite dishes of your loved ones. We have gathered all essential safety rules in this compilation called Thermomix™ Basics: Look up all the basics, learn how to use the Thermomix™ safely and discover everything you need to know about the accessories!

Safety Basics



FOR FOOD ONLY:

Thermomix™ is a cooking appliance intended to be only used for food preparation.



HANDLE WITH CARE:

Take care when cooking with Thermomix™ and make sure that novice users are supervised or instructed in the use of Thermomix™. Always take care and be mindful that children are not close by when cooking with Thermomix™.



CHECK IT OUT:

Check your Thermomix™ and accessories such as the connecting cable, the mixing bowl, the lid or the lid sealing ring (only TM31) for possible damage every time before using. Use only if undamaged and parts fit correctly.



KEEP HOUSING DRY:

Do not immerse the Thermomix™ housing in water. Make sure no water, liquid or solid food enters the housing. Clean housing only with a damp cloth. Disconnect the Thermomix™ from the main power supply before cleaning.



USE GREEN SEALING RING:

Always use your Thermomix™ TM31 with the green sealing ring only, properly fitted in the lid of the mixing bowl. If you don't have a green sealing ring, you can order one through your local customer service.



REMEMBER TO REPLACE:

The sealing ring (only TM31) should be replaced every two years, or sooner in case of damage or leakage. Only use original Vorwerk Thermomix™ accessories.



SHARP BLADES:

The blades of the mixing knife are very sharp. Only hold the upper part of the mixing knife when removing or re-inserting it. Do not touch the mixing knife when Thermomix™ is in operation.



FIND THE RIGHT POSITION:

Place your Thermomix™ on a clean, solid, even and non-heated surface so it cannot slip. Ensure the Thermomix™ is placed away from a stovetop as it may catch fire in case of being heated.



IT MAY MOVE:

Keep your Thermomix™ at a sufficient distance from the edge of the surface because when kneading dough or chopping food, the Thermomix™ may move. Please observe the machine at all times while operating.